

# CARROM®

Electrical Rating  
120 Volts - AC only (.42) Amps/60hz Polarized

218 E. Dowland St. Page 1  
P.O. Box 649  
Ludington, MI. 49431-0649  
[www.carrom.com](http://www.carrom.com)

MODEL NO. 225  
AGES 13 TO ADULT

**THIS PRODUCT IS NOT A TOY**

## **IMPORTANT SAFETY INSTRUCTIONS READ ALL INSTRUCTIONS**

**CAUTION:** ELECTRICALLY OPERATED PRODUCT: Not recommended for children under 13 years of age. As with all electric products, precautions should be observed during handling and use to prevent electric shock.

### **PARENTS PLEASE NOTE!**

Motor cord, cord plug and motor grille should be checked regularly. Any damage or hazardous condition should be corrected immediately. Do not use this game until properly repaired.

Place the game on a suitable table for play. A floor area will also provide a play surface on which to place the game. However, IT IS NOT RECOMMENDED THAT THE GAME BE PLACED ON A CARPETED AREA. Carpeted areas could restrict air flow and create a POTENTIAL FIRE HAZARD!

After play, always be sure the cord plug is disconnected from the electrical outlet to eliminate any risk of fire.

**IMPORTANT:** A balanced motor assembly in this game will give you maximum service. If dropped or handled improperly, the motor assembly could be damaged and cause the game to malfunction.

**WARNING:** TO AVOID ELECTRICAL SHOCK, DISCONNECT THE CORD PLUG FROM THE ELECTRICAL OUTLET BEFORE SERVICING THE GAME. NEVER USE A METALLIC PROBE TO OPEN PLUGGED AIR HOLES IN THE PLAY AREA SURFACE.

**ASSISTANCE HOTLINE: 1-231-845-1263**

IF YOU ARE MISSING A PART, REQUIRE HELP, OR ARE HAVING A PROBLEM WITH THE PERFORMANCE OF THIS GAME, PLEASE CALL FOR ASSISTANCE BEFORE RETURNING THE GAME TO THE STORE.

**CAUTION:** This is not a toy and is intended for use by or under the supervision of ADULTS!

**SAVE THESE INSTRUCTIONS**

07.225.01 Sept 2012



#8x3/4 Washer  
(4) required



#8-32 x 3/4" Machine Screw  
(4) required

STEP 1. From the carton carefully remove (2) plastic legs, (1) hardware/equipment pack containing (2) pucks, (2) controllers, (2) felt pads, (4) leg levelers and the fasteners consisting of (4) #8 Washers & (4) #8 – 32 x 3/4" Machine Screws.

STEP 2. Remove the game from the carton, place the game with the face side (playing surface) down on a table or on the floor.

STEP 3. Position Leg into base of game with black leg panel facing out towards end of game. Line up holes for #8 – 32 x 3/4" machine screw. Place washer on machine screw & insert through inside of leg assembly through pre drilled hole in leg. Continue to screw into metal insert until tight. (Do not over tighten these screws). Repeat for other leg. Now install black leg levelers into leg inserts.

Step 4. Turn game over and rest legs on a flat surface. Adjust leg levelers to level game.

STEP 5. Felt Pad Installation: Peel away the backing from each Felt Pad and carefully *align* and press into position, centering the pad on the controller. Do not use the controller without the pads. Replace pads when worn to avoid scratching the play surface.



STEP 6. Plug the games blower unit into a 110-120 volt AC Polarized outlet only! This game is equipped with a polarized, alternating line plug (a plug having one blade wider than the other). This is a safety feature. If you are unable to insert the plug fully into the outlet, try reversing the plug. If the plug still fails to fit, your outlet is obsolete and should be replaced by a qualified electrician. Do not alter this plug. Do not defeat the safety purpose of the polarized plug.

#### RULES FOR PLAY

Play should be started with a 1-2-3 "face-off" by dropping the puck in the center of the game. The object is to get the puck into the opponents goal. The players should stand at opposite ends of the game. Players may not cross beyond the center line of the game with their disc controller. The goal must be guarded from a position outside the "goal zone". When a goal is made, the puck is put in play by the player who was just scored on. The winning score is set at a nominal figure by agreement between players before starting play. Our scorer goes from 1-10.

#### TABLE MAINTENANCE

Occasionally, some air holes in the playing surface may become clogged. If this happens, you may reopen holes as follows: #1 DISCONNECT THE CORD PLUG FROM THE ELECTRICAL OUTLET. #2 Carefully push a thin, non-metallic probe into each clogged hole. A broom straw or wooden toothpick are good tools. Be careful not to damage the mouth of the hole being opened. Warning: To avoid electrical shock, never use a metallic probe to reopen air holes in play surface.

DO NOT USE HOUSEHOLD WAXES ON SURFACE as the "air cushion" may be affected due to the clogging of holes. If a puck becomes rough, carefully sand by placing it on a piece of fine sandpaper (#280 or 320 grit) and slide the puck back and forth until smooth.

**PRODUCT REGISTRATION:** Visit [www.carrom.com](http://www.carrom.com) to register your product(s) to receive the latest updates, special offers and other product related information.